


## GEARCASE COMPONENTS (MODELS BF20 AND BF2A)

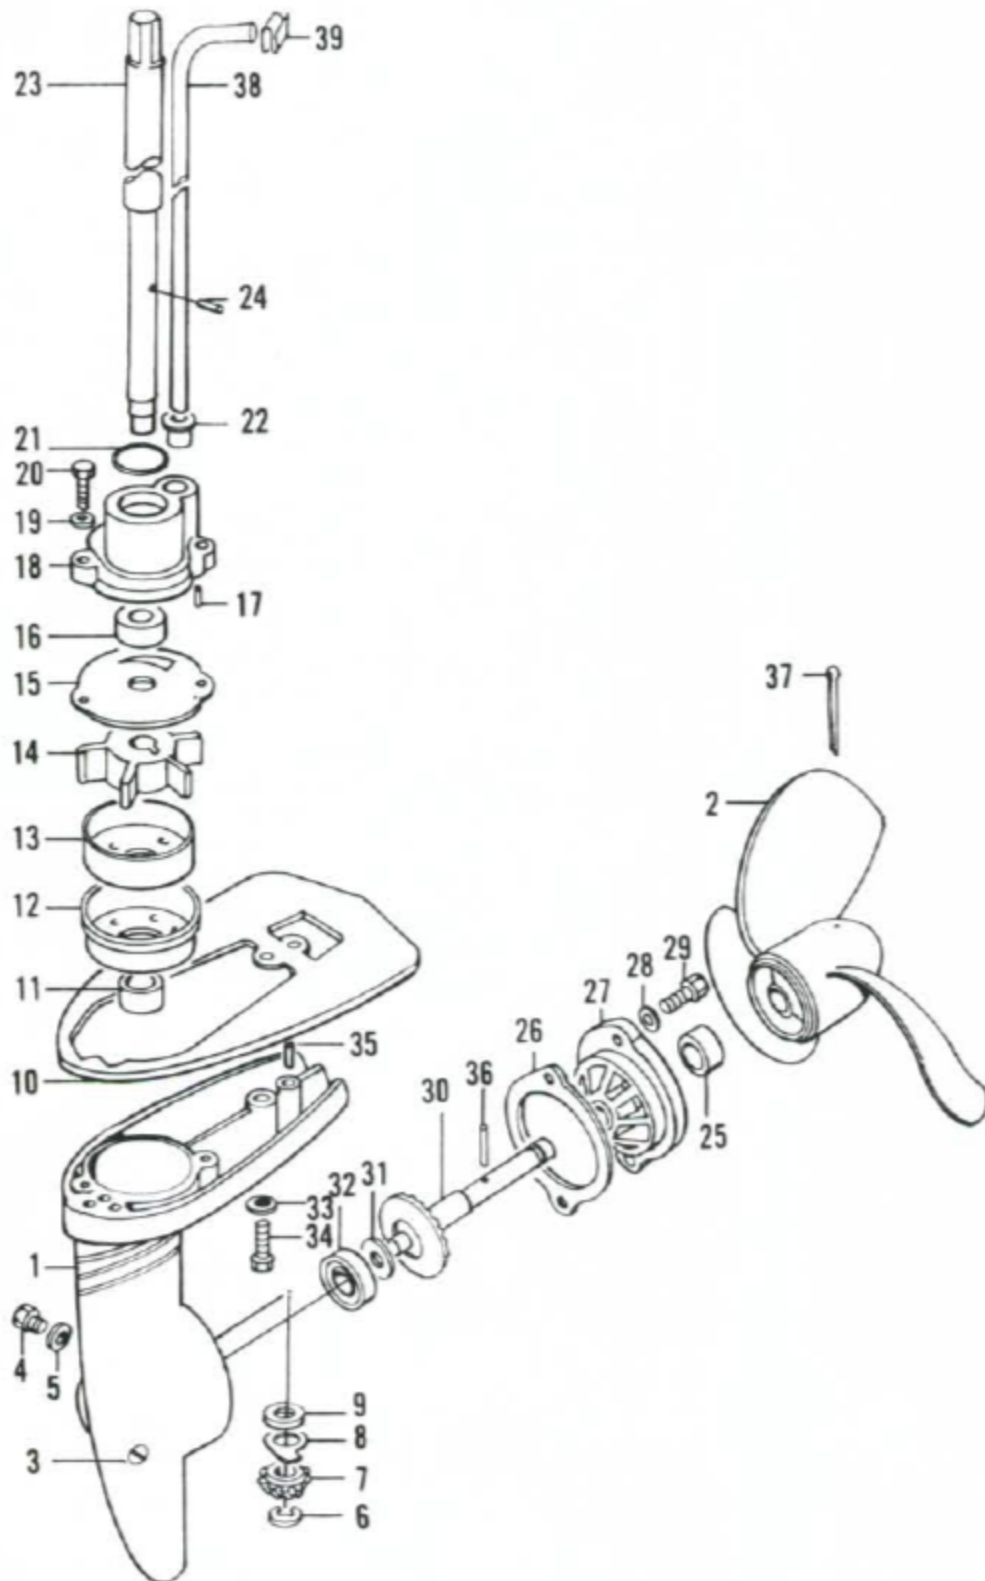

1. Gearcase housing
2. Propeller
3. Gear lubricant drain/fill plug
4. Gear lubricant vent plug
5. Washer
6. E-clip
7. Pinion gear
8. Thrust washer
9. Shim
10. Ventilation plate
11. Drive shaft seal
12. Seal protector
13. Insert
14. Impeller
15. Upper wear plate
16. Seal
17. Alignment pin
18. Water pump cover
19. Washer
20. Bolt
21. O-ring
22. Water tube grommet
23. Drive shaft
24. Drive key
25. Seal
26. Gasket
27. Gearcase cap
28. Washer
29. Bolt
30. Propeller shaft/driven gear
31. Thrust washer/shim
32. Ball bearing
33. Washer
34. Bolt
35. Alignment pin
36. Shear pin
37. Cotter pin
38. Water tube
39. Water tube seal/grommet