


GEARCASE COMPONENTS (MODELS BF9.9A AND BF15A)

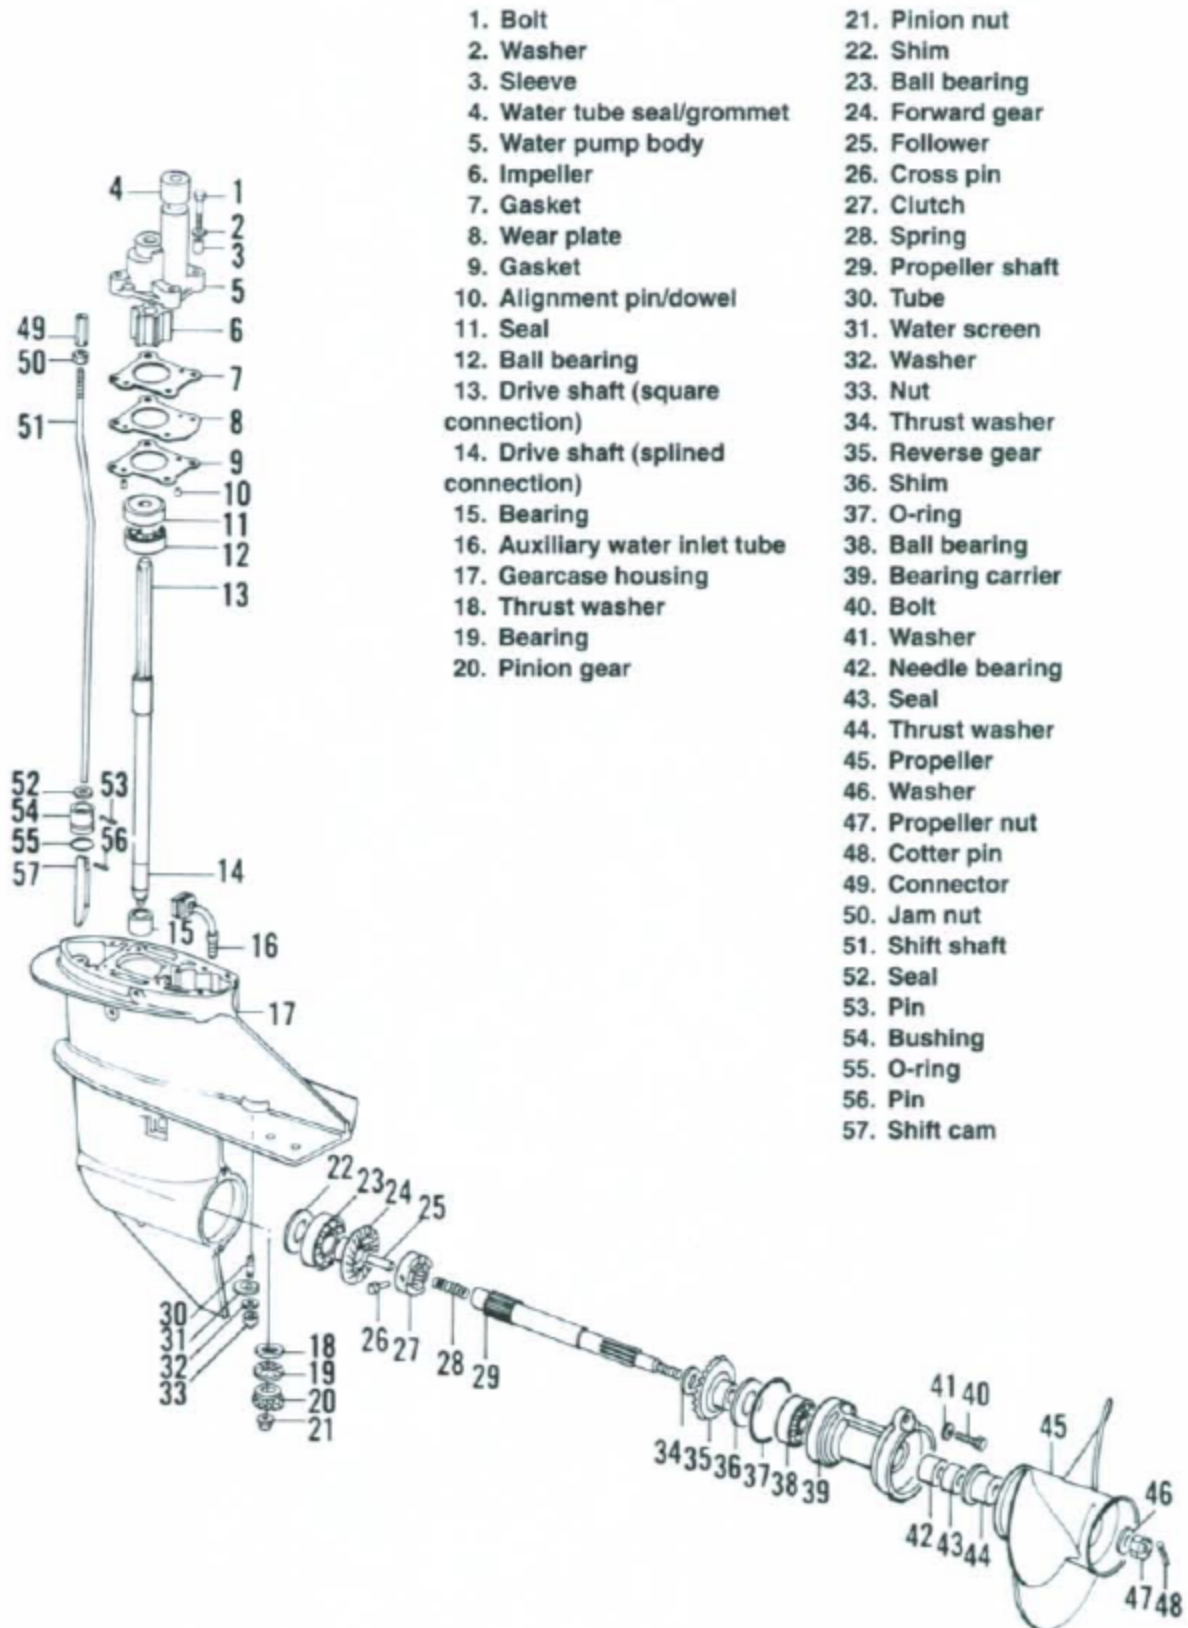

- | | |
|--------------------------------------|---------------------|
| 1. Bolt | 21. Pinion nut |
| 2. Washer | 22. Shim |
| 3. Sleeve | 23. Ball bearing |
| 4. Water tube seal/grommet | 24. Forward gear |
| 5. Water pump body | 25. Follower |
| 6. Impeller | 26. Cross pin |
| 7. Gasket | 27. Clutch |
| 8. Wear plate | 28. Spring |
| 9. Gasket | 29. Propeller shaft |
| 10. Alignment pin/dowel | 30. Tube |
| 11. Seal | 31. Water screen |
| 12. Ball bearing | 32. Washer |
| 13. Drive shaft (square connection) | 33. Nut |
| 14. Drive shaft (splined connection) | 34. Thrust washer |
| 15. Bearing | 35. Reverse gear |
| 16. Auxiliary water inlet tube | 36. Shim |
| 17. Gearcase housing | 37. O-ring |
| 18. Thrust washer | 38. Ball bearing |
| 19. Bearing | 39. Bearing carrier |
| 20. Pinion gear | 40. Bolt |
| | 41. Washer |
| | 42. Needle bearing |
| | 43. Seal |
| | 44. Thrust washer |
| | 45. Propeller |
| | 46. Washer |
| | 47. Propeller nut |
| | 48. Cotter pin |
| | 49. Connector |
| | 50. Jam nut |
| | 51. Shift shaft |
| | 52. Seal |
| | 53. Pin |
| | 54. Bushing |
| | 55. O-ring |
| | 56. Pin |
| | 57. Shift cam |