

GEARCASE COMPONENTS (MODELS BF115A AND BF130A [LEFT ROTATION MODELS])

1. Bolt
2. Washer
3. Sleeve
4. Water pump body
5. O-ring
6. Insert
7. Impeller
8. Drive key
9. Wear plate
10. Gasket
11. Alignment pin
12. Water pump base
13. Gasket
14. O-ring
15. Upper drive shaft seal

16. Lower drive shaft seal
17. Bearing race retainer
18. Bearing race
19. Roller bearing
20. Shim
21. Drive shaft
22. Nut
23. Anode
24. Filler block/seal
25. Support
26. Lubrication sleeve
27. Roller bearing
28. Seal
29. Bushing
30. O-ring
31. Spring
32. Washer
33. Clip
34. Shift shaft
35. Bolt
36. Water screen
37. Nut
38. Gear lubricant fill/vent plug
39. Washer
40. Gear lubricant fill/vent plug
41. Washer
42. Pinion gear
43. Pinion nut
44. Shims
45. Ball bearing

46. Reverse gear
47. Bolt
48. Bolt
49. Washer
50. Trim tab
51. Forward gear
52. Gear retainer
53. Shims
54. Bearing race
55. Roller bearing
56. Thrust bearing
57. Thrust washer
58. Spacer
59. O-ring
60. Bearing carrier
61. Washer
62. Bolt
63. Needle bearing
64. Inner propeller shaft seal
65. Outer propeller shaft seal
66. Propeller shaft
67. Clutch
68. Cross pin
69. Clutch spring
70. Bearing
71. Spring
72. Bearing
73. Detent ball
74. Shift actuator
75. Gearcase housing

