

**COUNTER ROTATION (LH) GEARCASE
(115-130 HP MODELS)**

- | | |
|---|----------------------------------|
| 1. Propeller nut | 24. Shim |
| 2. Spacer | 25. Bearing |
| 3. Propeller | 26. Lubrication sleeve |
| 4. Thrust washer | 27. Reverse gear assembly |
| 5. Bolt | 28. Bearing carrier |
| 6. Trim tab * | 29. Reverse gear bearing |
| 7. Bolt and washer | 30. Shim |
| 8. Water inlet screen | 31. Lower drive shaft bearing |
| 9. Drive shaft | 32. Gearcase housing |
| 10. Impeller | 33. Upper drive shaft bearing |
| 11. Drive key | 34. Spring |
| 12. Wear plate | 35. Cross pin |
| 13. Drive shaft bearing and seal housing | 36. Clutch |
| 14. Shift shaft seal housing | 37. Shift slider |
| 15. Shift shaft | 38. Shifter |
| 16. Cover nut | 39. Bearing carrier |
| 17. Locking tab washer | 40. Shim |
| 18. Bearing carrier and forward gear assembly | 41. Bearing |
| 19. Locating key | 42. Front propeller shaft |
| 20. Rear propeller shaft | 43. Forward gear bearing carrier |
| 21. Thrust spacer | 44. Thrust spacer |
| 22. Pinion gear | 45. Needle bearing |
| 23. Drive shaft impeller contact surface | 46. Forward gear assembly |
| | 47. Forward gear |
| | 48. Reverse gear |
| | 49. Needle bearing |

*Not used on all models.