


## STANDARD ROTATION (RH) GEARCASE (115-130 HP V4 AND 150-200 HP [2.6 LITER] MODELS)

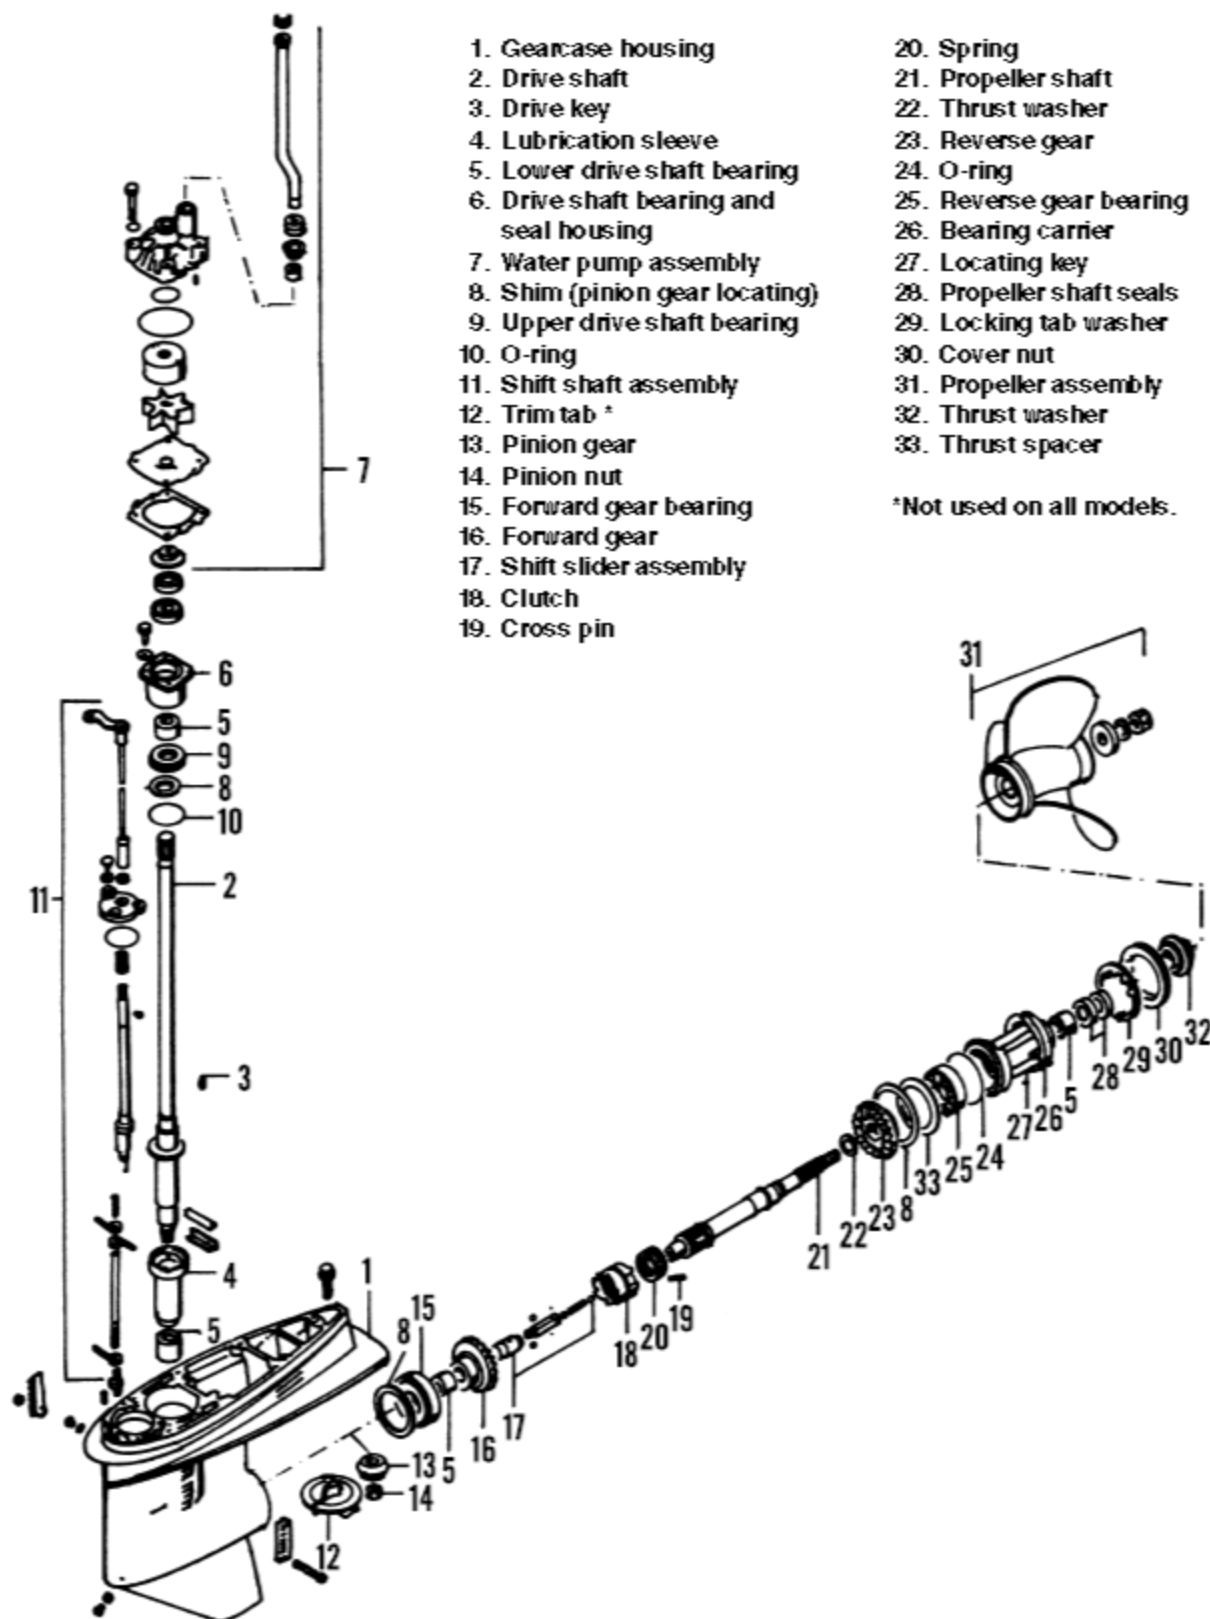

1. Gearcase housing
2. Drive shaft
3. Drive key
4. Lubrication sleeve
5. Lower drive shaft bearing
6. Drive shaft bearing and seal housing
7. Water pump assembly
8. Shim (pinion gear locating)
9. Upper drive shaft bearing
10. O-ring
11. Shift shaft assembly
12. Trim tab \*
13. Pinion gear
14. Pinion nut
15. Forward gear bearing
16. Forward gear
17. Shift slider assembly
18. Clutch
19. Cross pin

20. Spring
21. Propeller shaft
22. Thrust washer
23. Reverse gear
24. O-ring
25. Reverse gear bearing
26. Bearing carrier
27. Locating key
28. Propeller shaft seals
29. Locking tab washer
30. Cover nut
31. Propeller assembly
32. Thrust washer
33. Thrust spacer

\*Not used on all models.