

COUNTER ROTATION (LH) GEARCASE (150-200 HP MODELS [2.6 LITER])

- | | |
|---|--|
| 1. Propeller nut | 24. Bearing |
| 2. Spacer | 25. Lubrication sleeve |
| 3. Propeller | 26. Reverse gear assembly |
| 4. Thrust washer | 27. Reverse gear bearing |
| 5. Bolt | 28. Reverse gear bearing carrier |
| 6. Trim tab * | 29. Shim |
| 7. Bolt | 30. Lower drive shaft bearing |
| 8. Water inlet screen | 31. Gearcase housing |
| 9. Water pump body | 32. Needle bearing |
| 10. Impeller | 33. Spring |
| 11. Drive key | 34. Cross pin |
| 12. Wear plate | 35. Clutch |
| 13. Drive shaft bearing and seal housing | 36. Shifter |
| 14. Shift shaft seal housing | 37. Shift slider |
| 15. Shift shaft | 38. Forward gear and propeller shaft bearing carrier |
| 16. Cover nut | 39. Shim |
| 17. Locking tab washer | 40. Bearing |
| 18. Bearing carrier and forward gear assembly | 41. Propeller shaft |
| 19. Locating key | 42. Forward gear bearing |
| 20. Shim | 43. Thrust spacer |
| 21. Pinion gear | 44. Forward gear |
| 22. Drive shaft | 45. Needle bearing |
| 23. Shim | 46. Reverse gear |

*Not used on all models.