


## GEARCASE COMPONENTS (4 AND 5 HP MODELS)

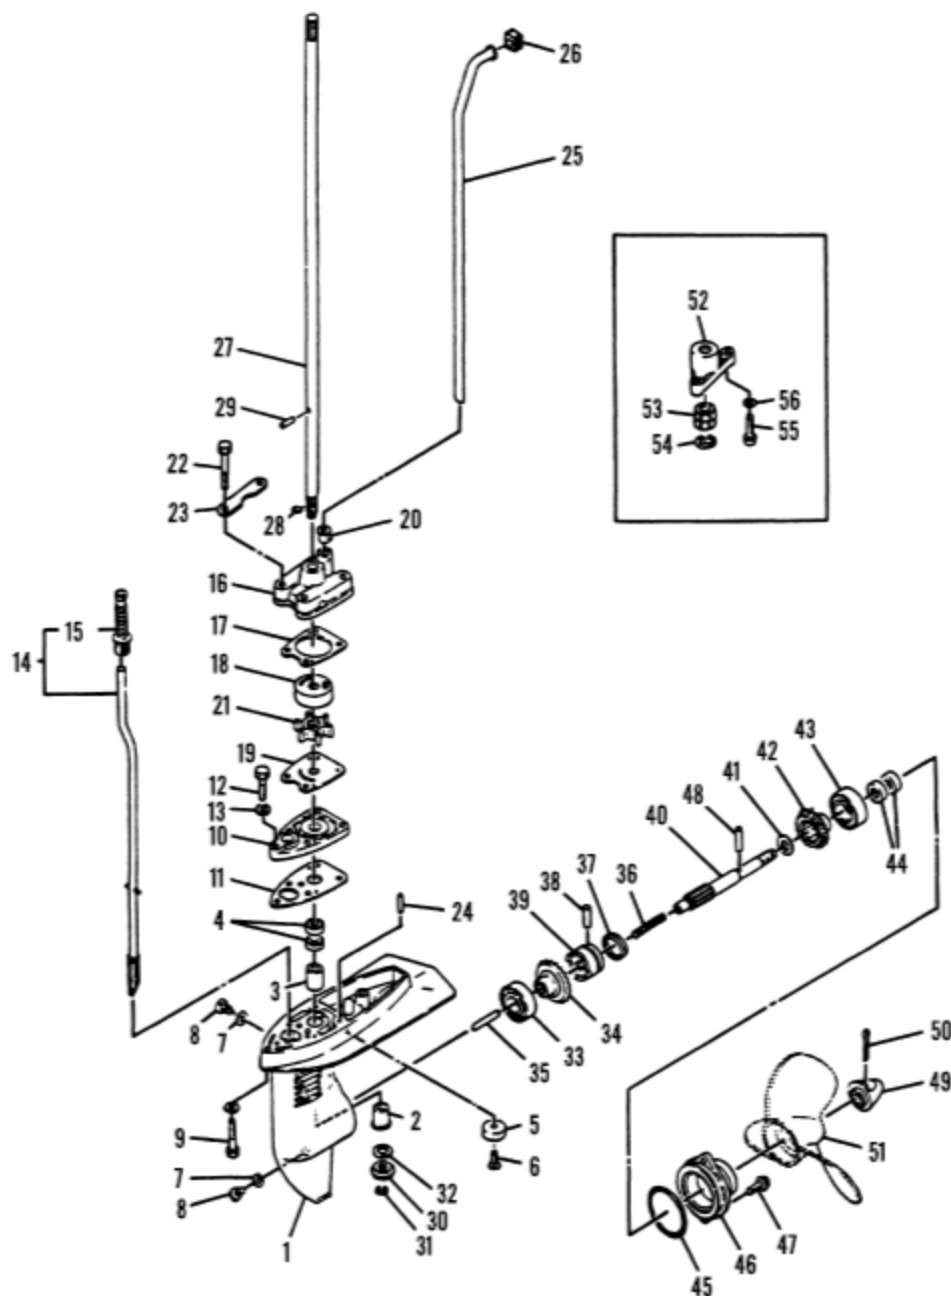

1. Gearcase housing
2. Lower drive shaft bushing
3. Upper drive shaft bushing
4. Drive shaft seals
5. Anode
6. Bolt
7. Sealing washer
8. Drain/fill/vent plugs
9. Mounting bolt
10. Water pump base
11. Gasket
12. Screw
13. Lockwasher
14. Shift shaft assembly
15. Shift shaft bellows
16. Water pump body
17. Gasket
18. Insert
19. Wear plate
20. Water tube grommet
21. Impeller
22. Screw
23. Plate
24. Locating pin
25. Water tube
26. Grommet/seal
27. Drive shaft
28. Lockring
29. Drive key
30. Pinion gear
31. E-clip
32. Pinion gear shim
33. Forward gear bearing
34. Forward gear
35. Cam follower
36. Cam follower spring
37. Clutch spring
38. Cross pin
39. Clutch
40. Propeller shaft
41. Thrust washer
42. Reverse gear
43. Reverse gear bearing
44. Propeller shaft seals
45. O-ring
46. Gearcase cap
47. Bolt
48. Shear pin (earlier models only)
49. Propeller nut
50. Cotter pin
51. Propeller
52. Bushing housing\*
53. Bushing\*
54. Clip\*
55. Screw\*
56. Washer\*

\*Used only on long shaft models.