


GEARCASE COMPONENTS (60-90 HP MODELS)

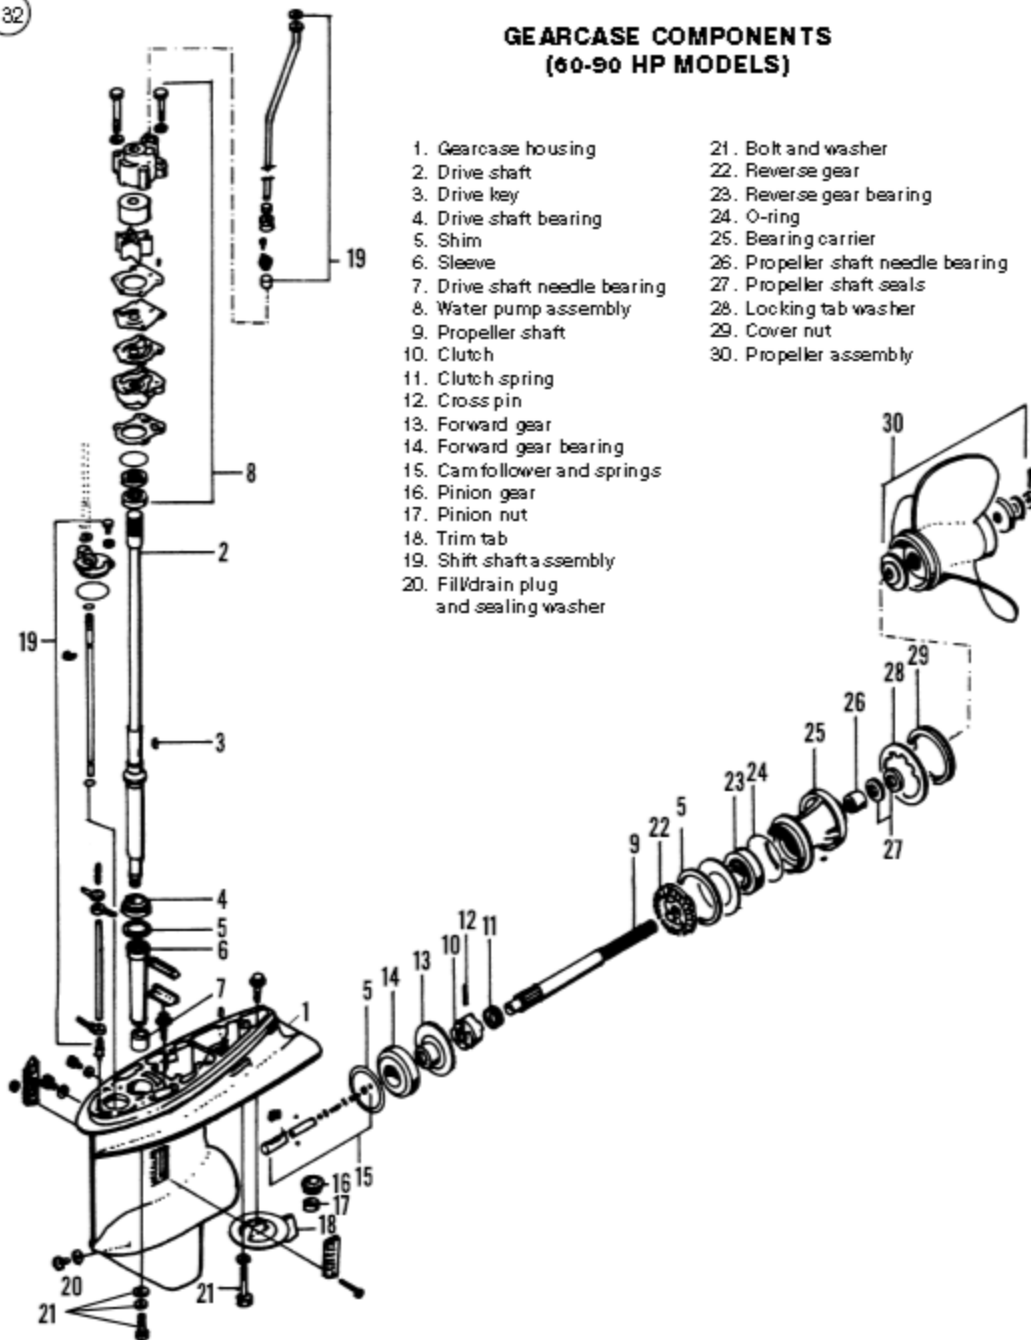

- | | |
|--|------------------------------------|
| 1. Gearcase housing | 21. Bolt and washer |
| 2. Drive shaft | 22. Reverse gear |
| 3. Drive key | 23. Reverse gear bearing |
| 4. Drive shaft bearing | 24. O-ring |
| 5. Shim | 25. Bearing carrier |
| 6. Sleeve | 26. Propeller shaft needle bearing |
| 7. Drive shaft needle bearing | 27. Propeller shaft seals |
| 8. Water pump assembly | 28. Locking tab washer |
| 9. Propeller shaft | 29. Cover nut |
| 10. Clutch | 30. Propeller assembly |
| 11. Clutch spring | |
| 12. Cross pin | |
| 13. Forward gear | |
| 14. Forward gear bearing | |
| 15. Cam follower and springs | |
| 16. Pinion gear | |
| 17. Pinion nut | |
| 18. Trim tab | |
| 19. Shift shaft assembly | |
| 20. Fill/drain plug and sealing washer | |