



POWER HEAD (60 HP MODELS)

- | | |
|---|--------------------------------|
| 1. Bearing | 43. Throttle cam stud |
| 2. Screw | 44. Interlock switch bracket |
| 3. Cotter pin | 45. Plastic rivet |
| 4. Plain washer | 46. Tower shaft |
| 5. Gear shift pivot | 47. Screw |
| 6. Roll pin | 48. Tower shaft bearing |
| 7. Shift coupler | 49. Spark control swivel |
| 8. Gear shift pin | 50. Spark control bearing |
| 9. Gear shift lever | 51. Hex nut |
| 10. Gear shift shaft | 52. Spark control link |
| 11. Cylinder and crankcase cover assembly | 53. Control link bearing |
| 12. Spaghetti seal | 54. Cylinder stud |
| 13. Cap screw | 55. Cylinder stud |
| 14. Hex head screw | 56. Locknut |
| 15. Hex head cap screw | 57. Cylinder head cover |
| 16. Drain fitting | 58. Thermostat |
| 17. Locating pin | 59. Hex cap screw |
| 18. Slotted screw | 60. Plain washer |
| 19. Cable clamp | 61. Spark plug |
| 20. Control cable spacer | 62. Hex cap screw |
| 21. Remote cable bracket | 63. Thermostat cover |
| 22. Cap screw | 64. Thermostat cover gasket |
| 23. Support plate mount fastener | 65. Thermostat |
| 24. Mount | 66. Thermostat grommet |
| 25. Front stabilizer | 67. Cylinder head cover gasket |
| 26. Hex cap screw | 68. Hex cap screw |
| 27. Internal tooth lockwasher | 69. Hex cap screw |
| 28. Ball-joint and bearing | 70. Rear stabilizer |
| 29. Hex nut | 71. Cylinder head |
| 30. Throttle link | 72. Cylinder head plug |
| 31. Coupler | 73. Cylinder head gasket |
| 32. Hex nut | 74. Hex cap screw |
| 33. Gear shift link | 75. Bypass valve cover |
| 34. Connector stud rod end | 76. Bypass valve cover gasket |
| 35. Stop nut | 77. Exhaust port plate gasket |
| 36. Shift arm bearing | 78. Exhaust port plate |
| 37. Shift arm stud | 79. Hex cap screw |
| 38. Shift arm | 80. Hex cap screw |
| 39. Screw | 81. Exhaust port cover |
| 40. Stop nut | 82. Wiring decal |
| 41. Throttle cam bearing | 83. Clamp |
| 42. Throttle cam | 84. Screw and lockwasher |
| | 85. Locating pin |