


## CYLINDER HEAD COMPONENTS (MODELS BF115A AND BF130A)

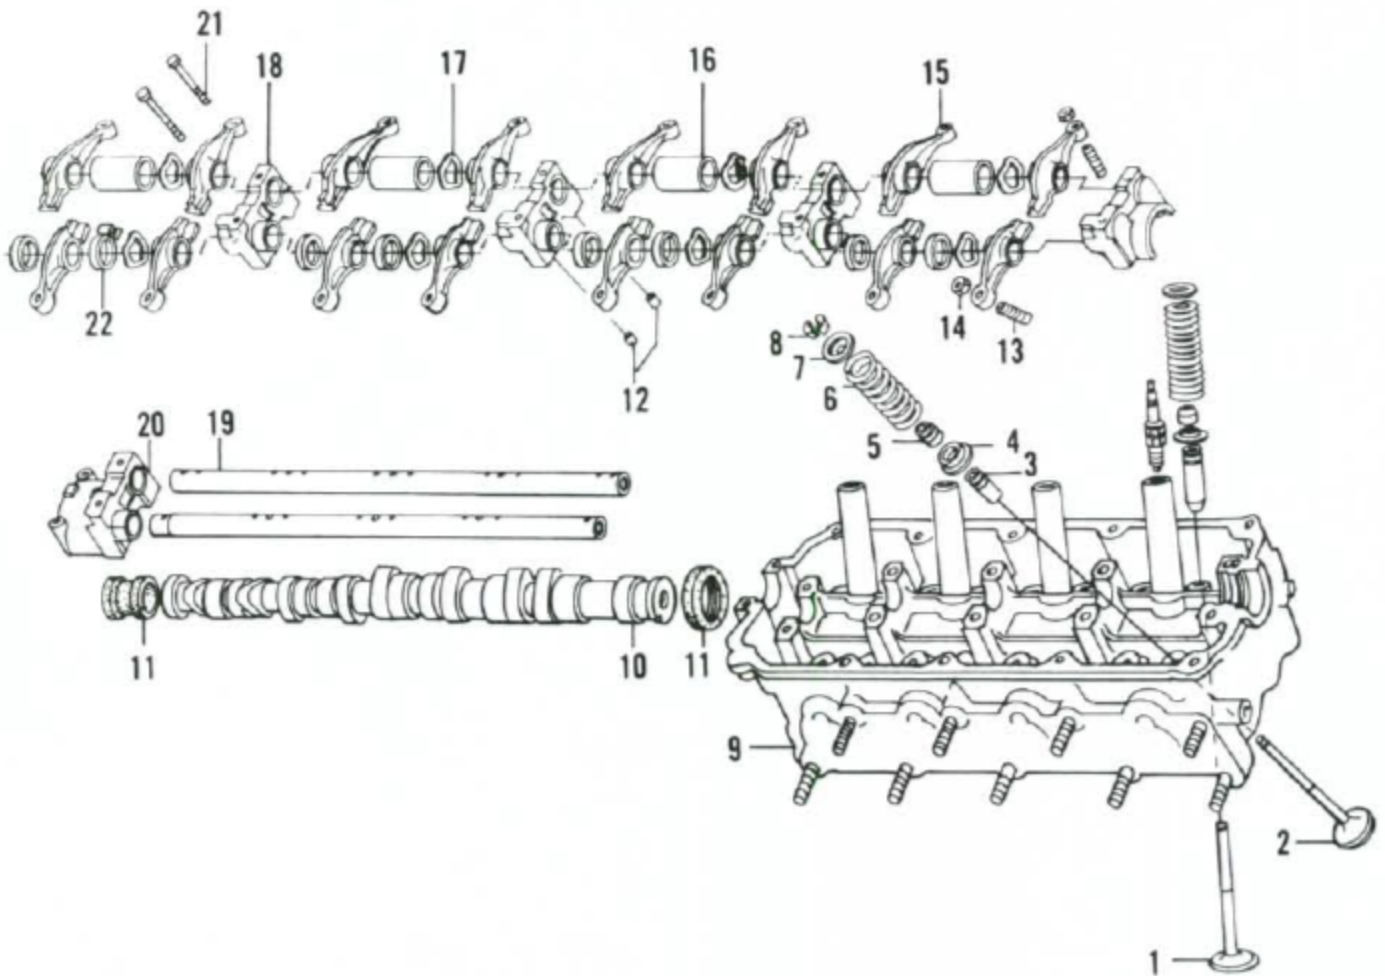

1. Intake valve
2. Exhaust valve
3. Valve guide
4. Spring base
5. Seal
6. Spring
7. Spring cap
8. Keepers
9. Cylinder head
10. Camshaft
11. Oil seal

12. Alignment pins
13. Adjusting screw
14. Locknut
15. Rocker arm
16. Spacer
17. Spring washer
18. Middle bracket
19. Rocker arm shafts
20. Upper bracket
21. Bolt
22. Spacer