


CYLINDER HEAD COMPONENTS (MODELS BF20A, BF25A AND BF30A)

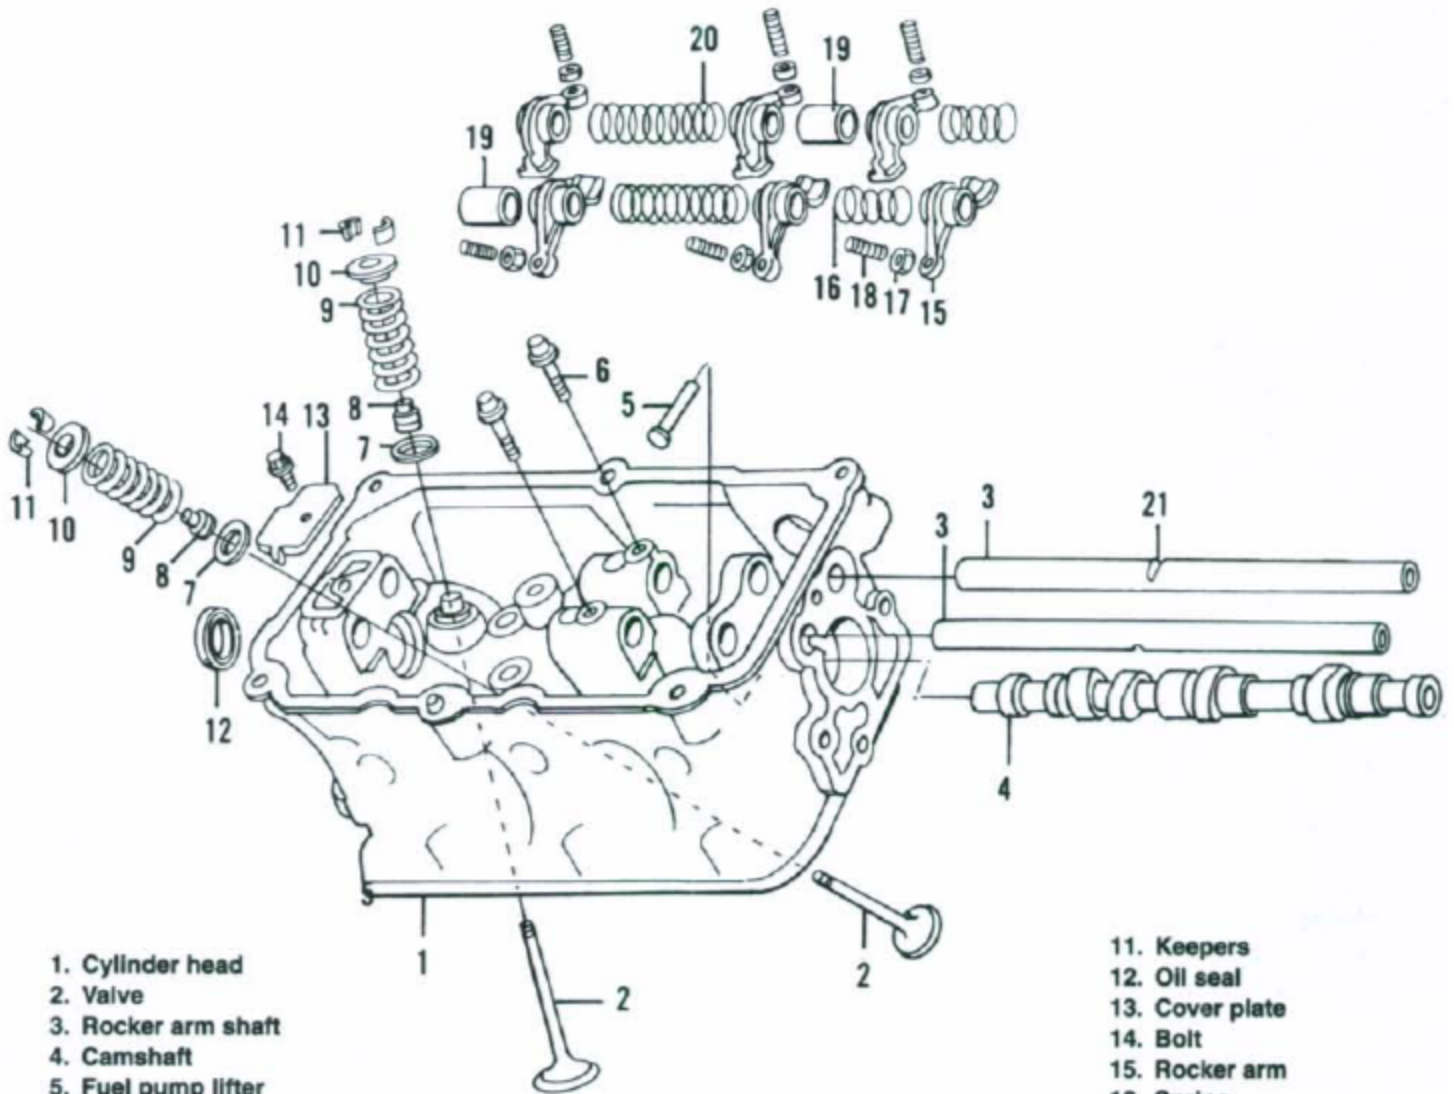

1. Cylinder head
2. Valve
3. Rocker arm shaft
4. Camshaft
5. Fuel pump lifter
6. Bolt
7. Spring base
8. Seal
9. Spring
10. Spring cap

11. Keepers
12. Oil seal
13. Cover plate
14. Bolt
15. Rocker arm
16. Spring
17. Locknut
18. Adjusting screw
19. Spacer
20. Spring
21. Rocker arm shafts