


CYLINDER HEAD COMPONENTS (MODELS BF35A, BF40A, BF45A AND BF50A)

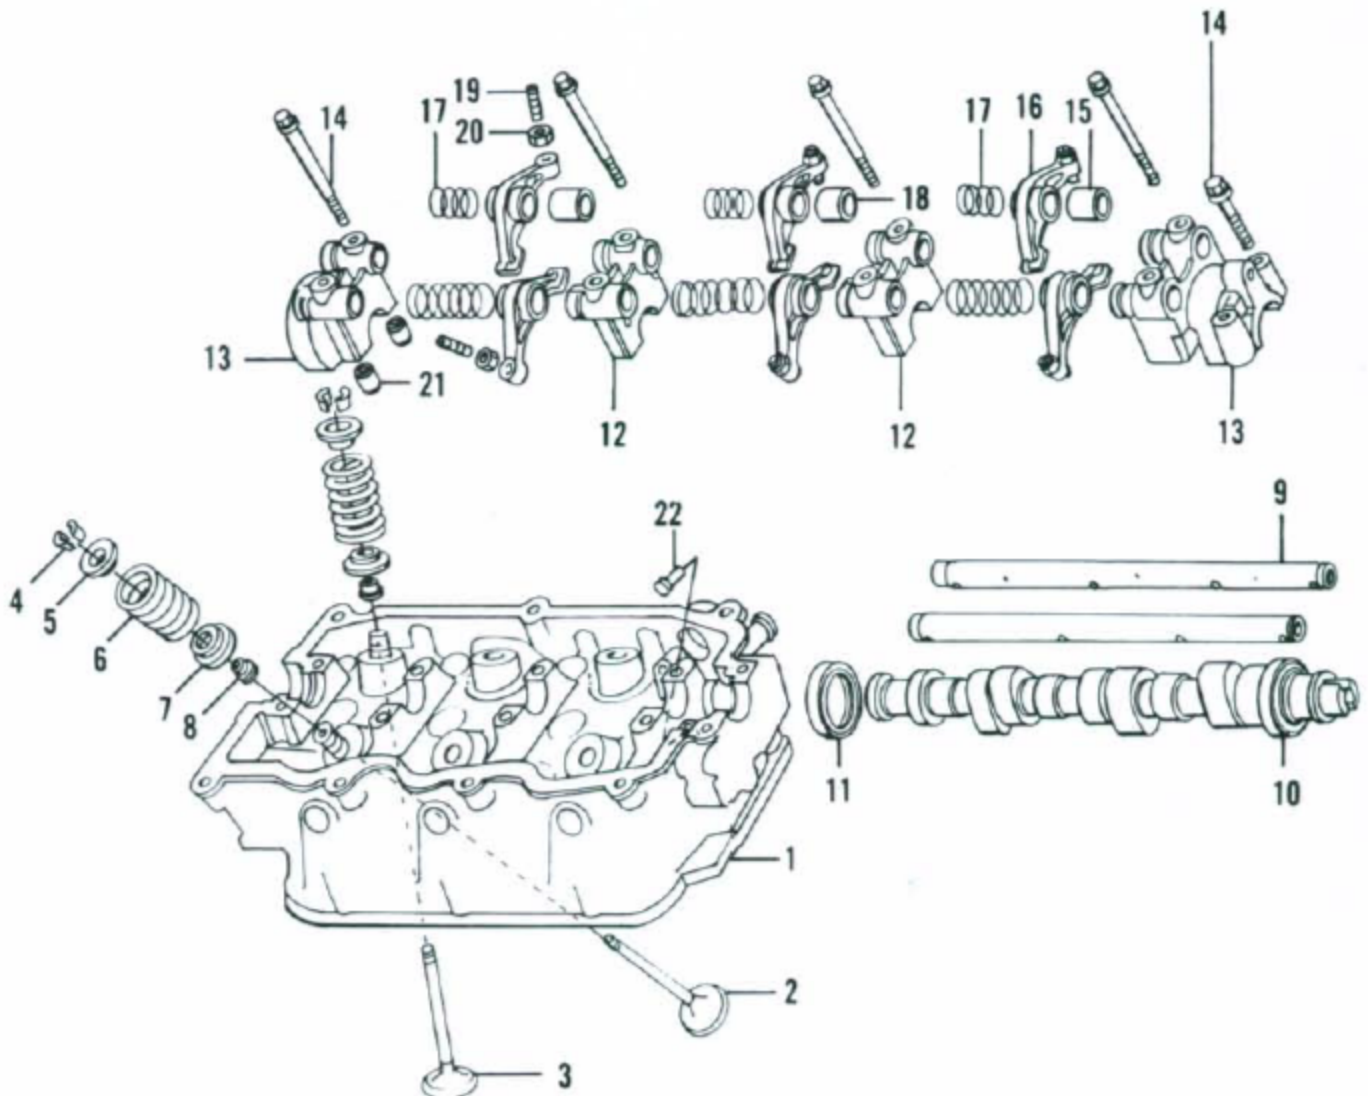

- | | |
|---------------------|----------------------|
| 1. Cylinder head | 12. Middle brackets |
| 2. Intake valve | 13. Lower bracket |
| 3. Exhaust valve | 14. Bolt |
| 4. Keepers | 15. Spacer |
| 5. Spring cap | 16. Rocker arm |
| 6. Spring | 17. Spring |
| 7. Spring base | 18. Spacer |
| 8. Seal | 19. Adjusting nut |
| 9. Rocker arm shaft | 20. Locknut |
| 10. Camshaft | 21. Sleeves |
| 11. Oil seal | 22. Fuel pump lifter |