


CYLINDER HEAD COMPONENTS (MODELS BF75A AND BF90A)

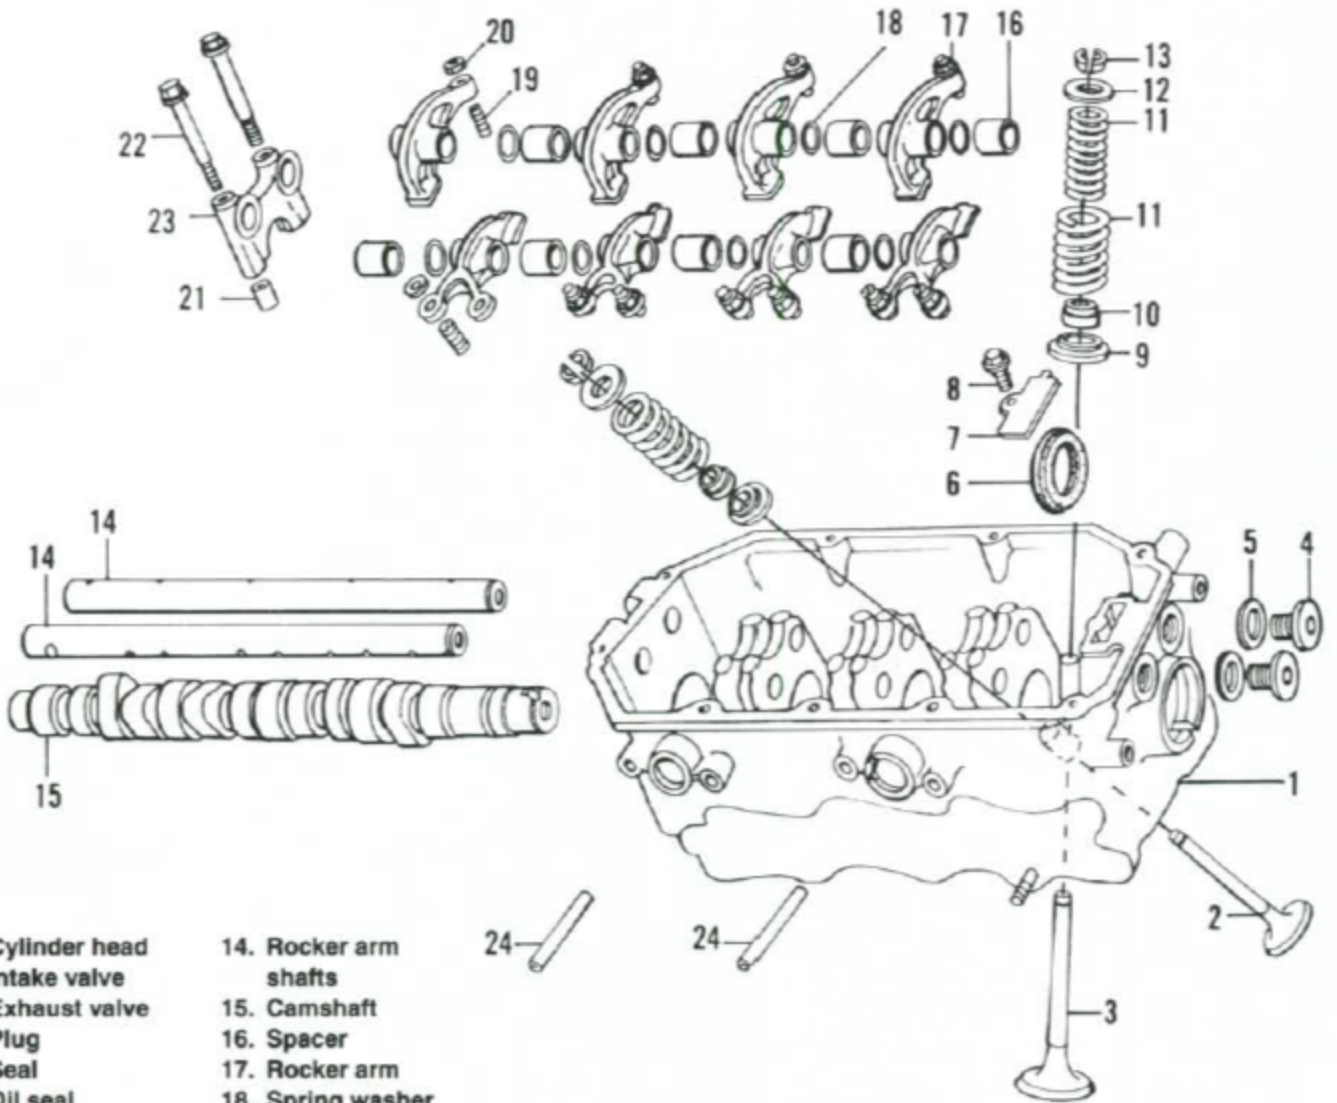

- | | |
|------------------|-----------------------|
| 1. Cylinder head | 14. Rocker arm shafts |
| 2. Intake valve | 15. Camshaft |
| 3. Exhaust valve | 16. Spacer |
| 4. Plug | 17. Rocker arm |
| 5. Seal | 18. Spring washer |
| 6. Oil seal | 19. Adjusting screw |
| 7. Plate | 20. Locknut |
| 8. Bolt | 21. Sleeve |
| 9. Spring base | 22. Bolt |
| 10. Seal | 23. Upper bracket |
| 11. Spring | 24. Fuel pump lifters |
| 12. Spring cap | |
| 13. Keepers | |