


## DRIVE SHAFT AND WATER PUMP COMPONENTS (115 HP OPTMAX AND 135-200 HP [EXCEPT 200 HP OPTIMAX])

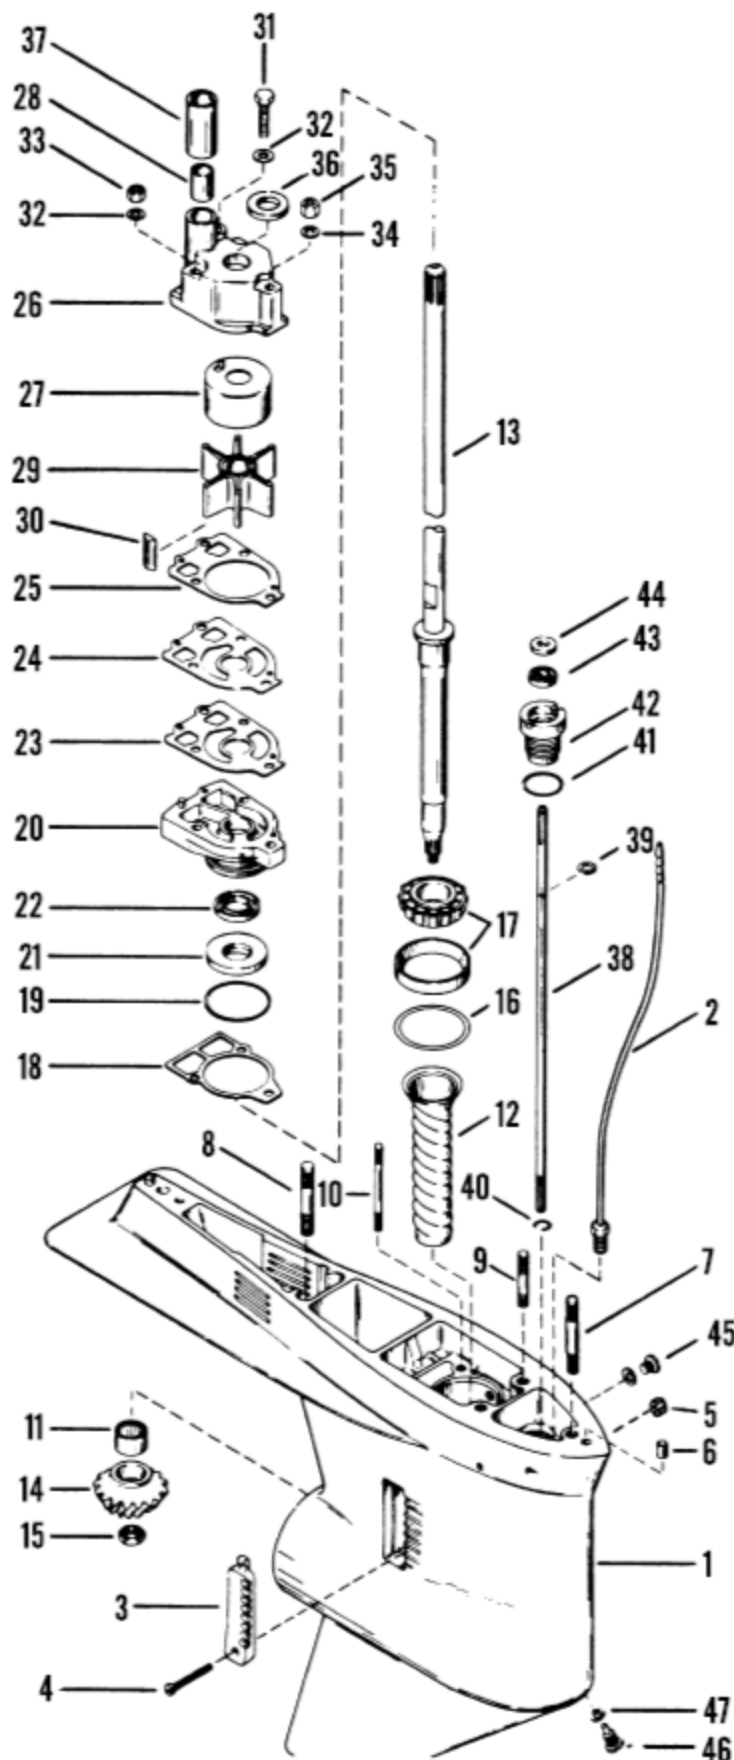

1. Gearcase housing
2. Speedometer tube
3. Water insert
4. Screw
5. Hex nut
6. Dowel pin
7. Stud
8. Stud
9. Stud, water pump
10. Stud, water pump
11. Roller bearing
12. Sleeve
13. Drive shaft
14. Pinion gear
15. Pinion gear nut
16. Shim pack
17. Roller bearing assembly
18. Gasket
19. O-ring
20. Water pump base
21. Oil seal (larger diameter)
22. Oil seal (smaller diameter)
23. Gasket
24. Plate
25. Gasket
26. Water pump body
27. Insert
28. Seal
29. Impeller
30. Impeller drive key
31. Screw
32. Washer
33. Nut
34. Washer
35. Nut
36. Centrifugal slinger seal
37. Sleeve
38. Lower shift shaft
39. E-clip
40. Retaining clip
41. O-ring
42. Shift shaft bushing
43. Oil seal
44. Rubber washer
45. Vent screw
46. Fill/drain screw
47. Sealing washer