


GEARCASE COMPONENTS (2.5 HP MODELS)

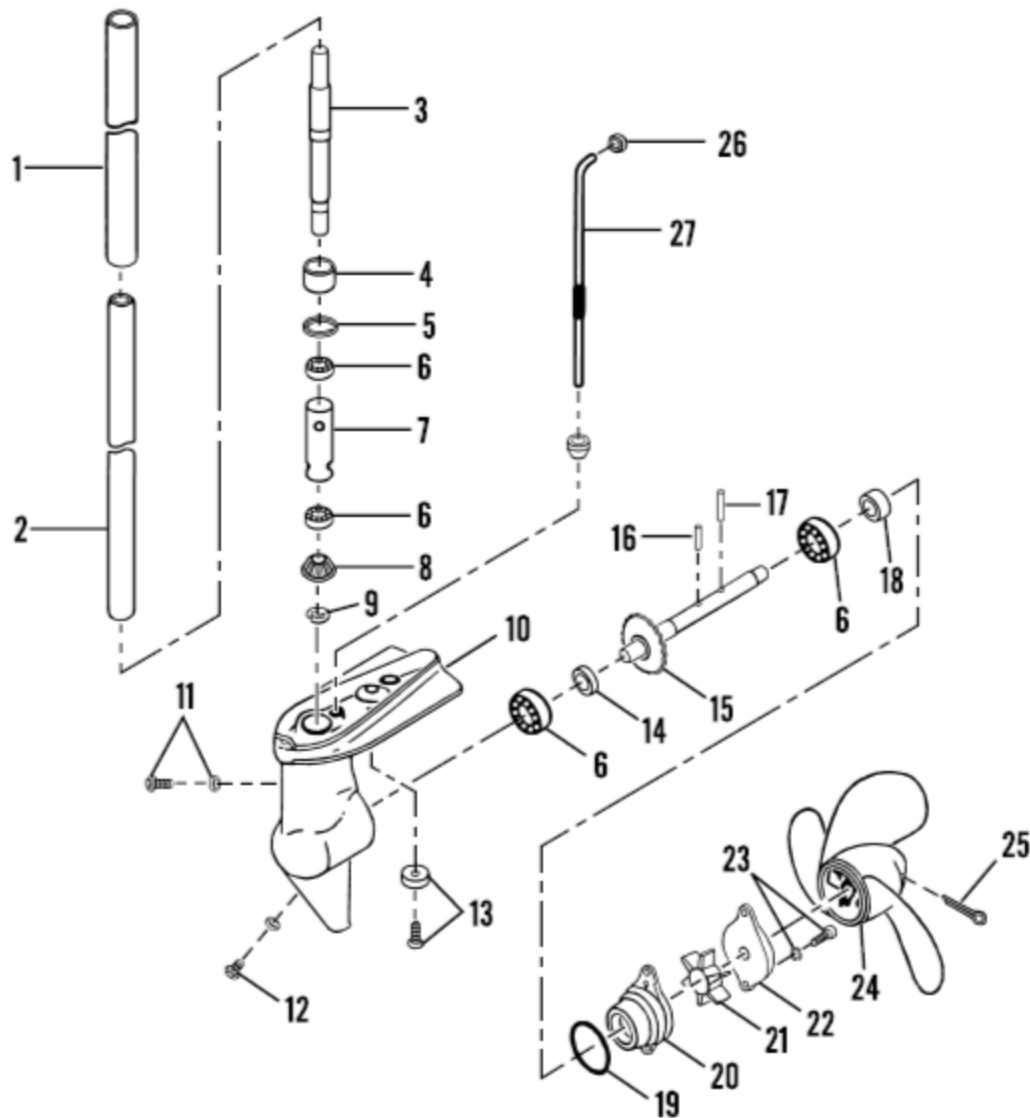

- | | |
|-----------------------------|--|
| 1. Drive shaft support tube | 15. Propeller shaft/driven gear assembly |
| 2. Upper drive shaft | 16. Impeller drive pin |
| 3. Lower drive shaft | 17. Propeller drive pin |
| 4. Drive shaft seal | 18. Propeller shaft seal |
| 5. Snap ring | 19. O-ring |
| 6. Ball bearings | 20. Impeller housing |
| 7. Spacer sleeve | 21. Impeller |
| 8. Pinion gear | 22. Pump cover |
| 9. E-clip | 23. Screw and washer |
| 10. Gearcase housing | 24. Propeller |
| 11. Vent plug and seal | 25. Cotter pin |
| 12. Drain plug and seal | 26. Water tube seals |
| 13. Anode and screw | 27. Water tube |
| 14. Shim(s) | |