

## **GEARCASE COMPONENTS (3.3 HP MODELS)**

1. Screw and washer
2. Water pump housing
3. Pump liner
4. Impeller
5. Gaskets
6. Impeller plate
7. Pump base
8. Drive shaft seal
9. Water tube seals
10. Water tube guide
11. Water tube
12. Impeller drive key
13. Drive shaft
14. Ball bearings
15. Spacer sleeve
16. Vent plug and seal
17. Screw, lockwasher and washer
18. Anode and screw
19. Pinion gear
20. Shim(s)
21. Forward gear
22. Shift cam follower
23. Spring
24. Sliding clutch
25. Propeller shaft
26. Propeller shaft seal
27. O-rings
28. Propeller shaft bearing carrier
29. Screw and washer
30. Propeller drive pin
31. Propeller
32. Cotter pin
33. Fill/drain plug and seal
34. Shift cam
35. Lower shift shaft
36. Roll pins
37. Screw and washer
38. Clamp
39. Upper shift shaft
40. Shift lever
41. Screw and washer
42. Spring
43. Detent ball
44. Shift control lever