

GEARCASE (MODELS DT4 AND DT5)

1. Bushing
2. Thrust washer
3. Drive shaft
4. Circlip
5. Lockring
6. Bushing
7. Gearcase housing
8. Pinion gear thrust washer
9. Washer
10. Forward gear shim
11. Forward gear
12. Thrust washer
13. Cam follower
14. Cross pin connector
15. Spring
16. Pinion gear
17. Clutch
18. Cross pin retainer
19. Propeller shaft

20. Thrust washer
21. Reverse gear
22. Reverse gear shim
23. Ball bearing
24. O-ring
25. Bearing
26. Seal
27. Gearcase cap
28. Retainer
29. Seal
30. Seal
31. Thrust hub
32. Shear pin
33. Propeller drive hub
34. Cotter pin
35. Washer
36. Propeller
37. Propeller nut

