


### GEARCASE (MODELS DT8, DT9.9 AND DT15)

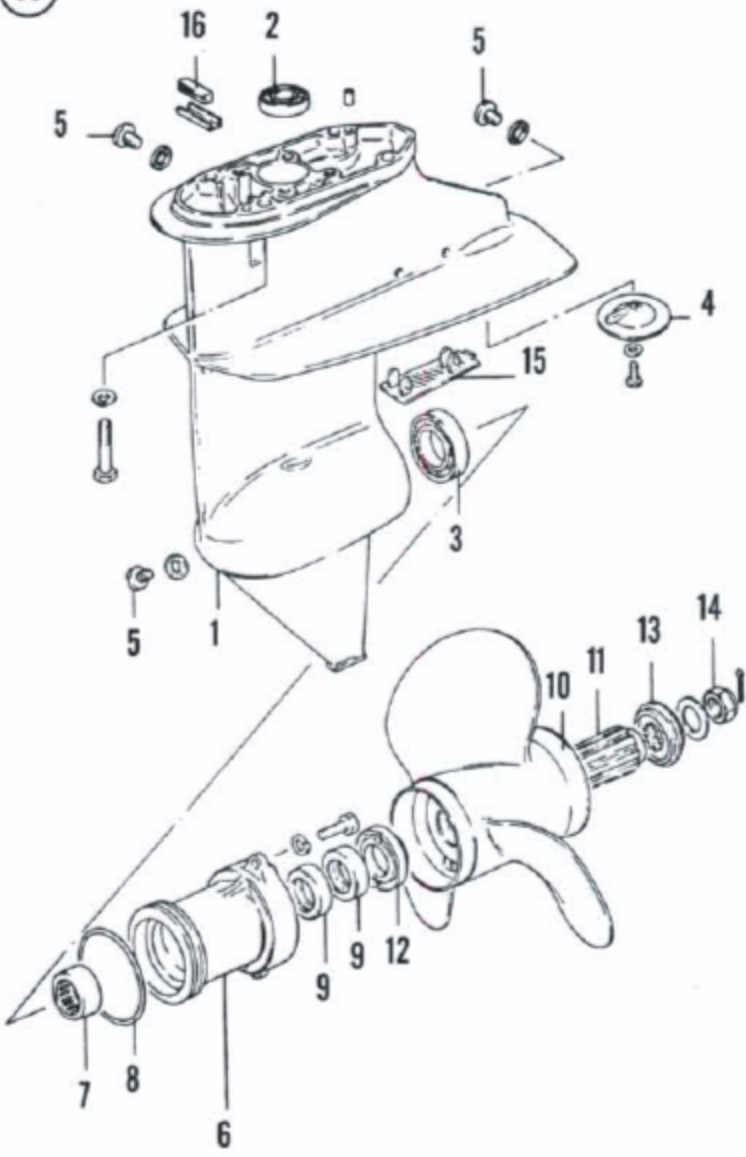

- 1. Gearcase housing
- 2. Bearing
- 3. Bearing
- 4. Anode
- 5. Vent plug
- 6. Bearing carrier
- 7. Bearing
- 8. O-ring
- 9. Seal
- 10. Propeller
- 11. Propeller drive hub
- 12. Thrust hub
- 13. Splined washer
- 14. Propeller nut
- 15. Water screen
- 16. Filler block
- 17. Drive shaft
- 18. Bearing
- 19. Thrust washer
- 20. Thrust bearing
- 21. Shim
- 22. Pinion gear
- 23. Shim
- 24. Forward gear
- 25. Cam follower
- 26. Clutch
- 27. Spring
- 28. Propeller shaft
- 29. Reverse gear

