


GEARCASE (COUNTER-ROTATION V6 MODELS)

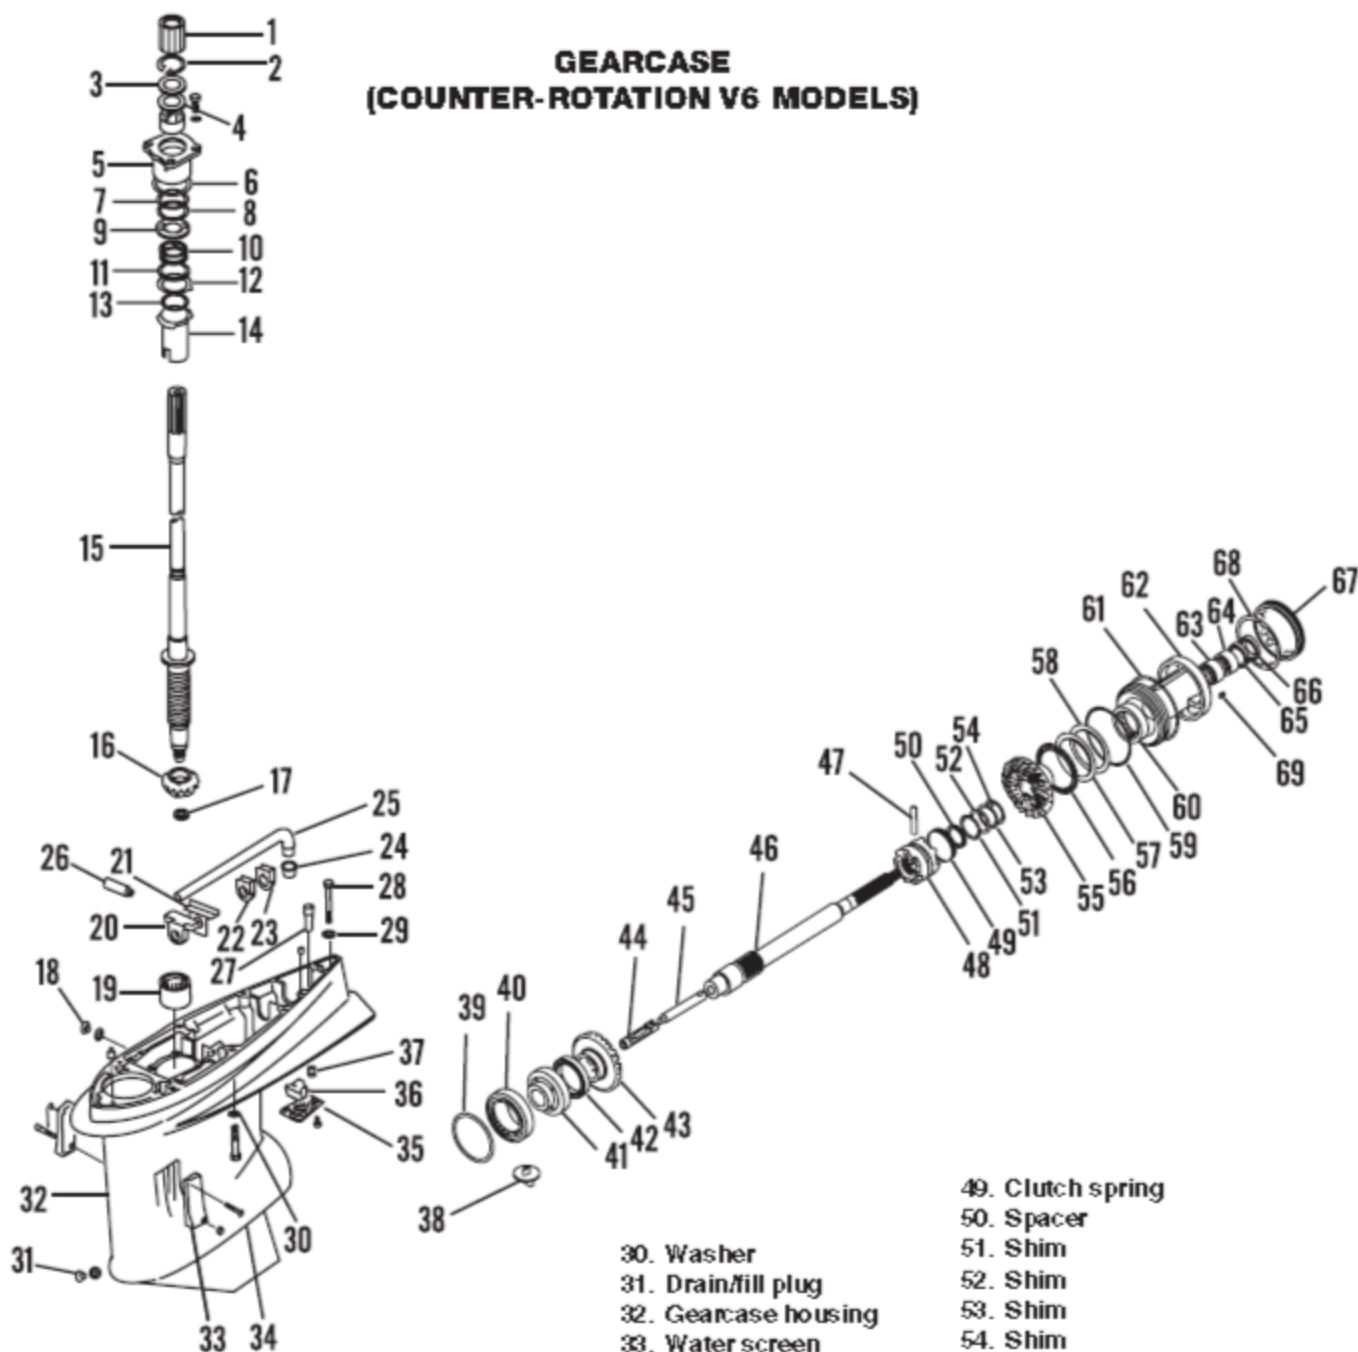

1. Sleeve*
2. Circlip*
3. Seals
4. Bearing
5. Bearing and seal housing
6. O-ring
7. Shim
8. Bearing race
9. Bearing
10. Preload spring
11. Thrust washer
12. Tabbed thrust washer
13. Spacer*
14. Sleeve

15. Drive shaft
16. Pinion gear
17. Pinion nut
18. Plug
19. Bearing
20. Mount*
21. Bracket*
22. Support grommet*
23. Support grommet*
24. Grommet*
25. Water tube*
26. Sleeve*
27. Alignment pin
28. Bolt
29. Washer

30. Washer
31. Drain/fill plug
32. Gearcase housing
33. Water screen
34. Screw
35. Water screen*
36. Filler block*
37. Tube
38. Trim tab
39. Shim
40. Bearing
41. Bearing assembly
42. Bearing
43. Front mounted gear (reverse)
44. Shifter
45. Shift connector
46. Propeller shaft
47. Cross pin
48. Clutch

49. Clutch spring
50. Spacer
51. Shim
52. Shim
53. Shim
54. Shim
55. Rear mounted shim (forward)
56. Bearing
57. Bearing race
58. Shim
60. Bearing
61. O-ring
62. Bearing carrier
63. Bearing
64. Bearing
65. Seal
66. Seal
67. Cover nut
68. Tab washer
69. Locating key

* Not used on all models